


1200 bps Packet Operation

Connections for Packet Operation

Connect the TNC, etc., to the microphone jack (on the front panel) and SP jack (on the rear panel) on the transceiver.

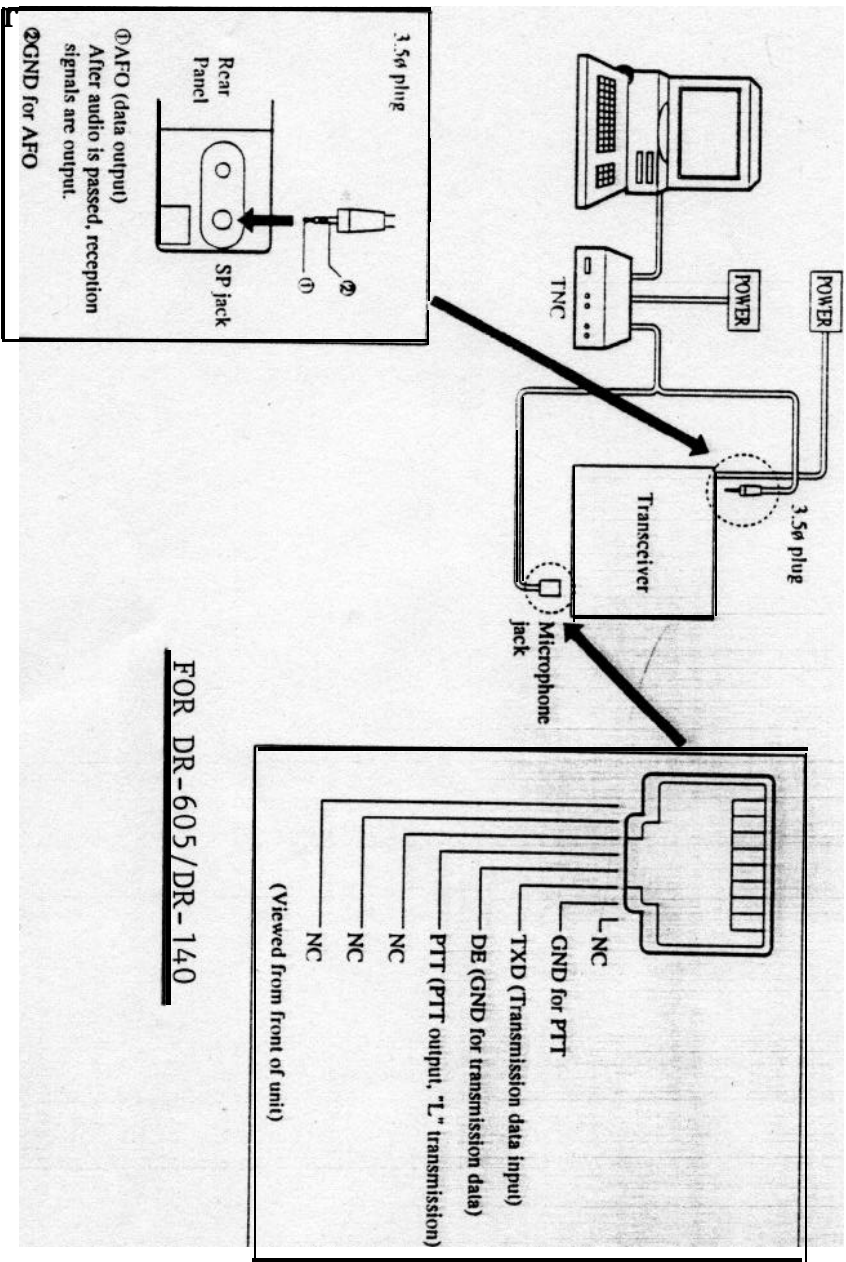

FOR DR-605/DR-140