



438 Amapola Ave., Suite 130 • Torrance, California 90501
Phone: 310/618-8616 Fax: 310/618-8758

DJ-190T MEMORY CHANNEL DISPLAY MODE

Owner's Manual Reference Page: 9

In *memory channel display mode*, instead of displaying a frequency, the corresponding memory channel number will only be displayed. In this mode, you cannot enter the VFO and you cannot program or reprogram a memory channel unless you first exit this mode. To enter this mode, first program FL or KL (see section 8 - 4 : Other Functions) then press the following keys in sequence:

"F" Key: once

"▲" Key: (6) six times

"▼" Key: (3) three times

"MONI" Key: once

The LCD will now convert to *channelized display mode* assuming you have at least (1) one channel programmed into memory. If not, you will get a "ch-Er" displayed on the LCD. Now cancel the FL or KL function. Where "SKIP" channels have been programmed, the hyphen between "ch" and the channel number will not be displayed. Repeat the same steps to exit this mode and return to the frequency display setting.