The Cross Band Semi-Duplex Operation of the DJ-GlT

- 1. Select a Memory Channel which has a 440MHz frequency to receive.
- 2. Set the VFO mode.
- 3. Set a VHF simplex frequency to transmit.
- 4. Press and hold the "FUNC" key, then press the "LAMP/SPLIT" key.
 The three down arrow icon will be displayed on the top of the LCD.
- 5. Press and hold the "FUNC" key, then press the "3/REV" key. The memory frequency you select is displayed.
- 6. This completes the procedure.

When you press the "PTT" switch, the radio will transmit from the <u>VHF</u> side, and receives the <u>UHF</u> frequency when the "PTT" switch is released.

Alinco Electronics, Inc.